

INNCOM E527 THERMOSTAT

The e527 is an intuitive, low voltage controller for an INNCOM energy management system (EMS) that helps reduce guestroom HVAC energy costs without sacrificing guest comfort.

The INNCOM e527 EMS thermostat, when equipped with the optional passive infrared sensor (PIR), functions as a standalone energy management system. This enables it to control in-room temperatures based on guest occupancy, and saves you guestroom HVAC energy. The e527 can be integrated with a door sensor or electronic lock for advanced occupancy detection to save you even more. Humidity sensing can also be added for greater guest comfort.

For the most savings, network your hotel's property management system (PMS) with INNCOM's INNcontrol energy management supervisor software. You'll gain access to a variety of insightful dashboards with real-time data, notifications, analytics, reports, and more.



e527 low voltage EMS thermostat with flat PIR



Precision temperature control

Advanced energy management

Optional ecoMODE®



On-board PIR optional

RF Wireless Communication

Oversized framing plate for use in US applications



Customer programmable parameters

Low voltage

Low installation costs



May be integrated with the INNCOM Room Automation System over the Deep Mesh network with INNcontrol EMS software



Lighting integration

Balcony Door Monitoring

Minibar & safe monitoring

Third-party integrations

Honeywell

E527 EMS THERMOSTAT

APPLICATIONS


When used as an HVAC controller or thermostat in conjunction with an external control module, it will automatically adjust fan speeds and valves or compressor run time to achieve set temperature. The e527 can also be used with a Guestroom Keycard Controller to provide accurate temperature control in a guest-initiated energy conservation system.

As the key node in an occupancy-based Energy Management System (EMS), it receives inputs from a PIR motion detector and the wired or wireless door switches to determine guestroom occupancy. During times when the room is rented but the guest is not present, the temperature can range up or down within a programmable setback band from the guest's selected temperature. This results in energy savings with no impact on guest comfort.

When it is connected to Honeywell's INNcontrol EMS additional energy savings are achieved by using a broader setback band when the guestroom is un-rented. It can also apply wider temperature setback bands when the room is in hibernation during offseason periods.

The e527 can act as a signal repeater with other room devices, such as Lamp Control Modules, having wireless transceivers or S5bus connectivity. It can also monitor a balcony door, window, minibar or other sensors.

ORDERING GUIDE

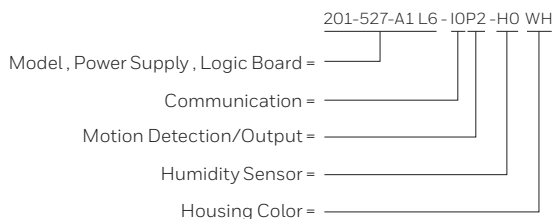

CONFIGURATIONS	DESCRIPTION
5 Button, No PIR	PX
5 Button, PIR	P1
6 Button, No PIR	P0
6 Button, PIR	P2
No Humidity Sensor	OH
Humidity Sensor	1H
Color White	WH
Color Black	BK

Honeywell Hospitality

12 Clintonville Road
Northford, CT 06472
1-800-543-1999
inncom.com

Specifications	
DIMENSIONS	89 mm x 89 mm x 23 mm (.5 in x 3.5 in x 0.9 in)
POWER REQUIREMENTS	12VDC, 50mA
MOUNTING	Standard British Gang Size
OPERATING RANGE	41°F to 149°F (5°C to 65°C)
TEMPERATURE	± 1°F 60°F to 85°F (± 0.5°C 15°C to 30°C)
STANDARD COLOR OPTIONS	Black, white and almond
THERMOSTAT MEASUREMENT RANGE	33°F to 99°F (1°C to 37°C)
OUTDOOR AIR TEMPERATURE DISPLAY	0°F to 99°F (-18°C to 37°C)
DISPLAY RESOLUTION	Whole degree F, 0.5 degree C (0.1 degree F in test mode)
STANDARD DEADBAND	2°F (1°C) between heating and cooling
C/F DEGREES DISPLAY	Toggle Button on front of display
AMBIENT OPERATING*	41°F to 149°F (5°C to 65°C), 0-95% RH noncondensing
AMBIENT STORAGE	33°F to 149°F (1°C to 65°C)
RF DATA RATE	250kbps
ANTENNA TYPE	SMT
INDOOR RANGE	70ft
TRANSMIT POWER	1mW
RECEIVE SENSITIVITY	-94.6dBm
RECOMMENDED WIRE	26 gauge
EXTERNAL HEADERS	S5Bus, RS485, External Temp Sensor, ES1
FREQUENCY BAND	2.4GHz
PROTOCOL	802.15.4
FREQUENCY CHANNELS	11-26
APPROVALS	FCC, CE Mark

Part Number	Description
PC502**	Protocol Converter
X47.L.P	24VAC Relay Module
S541.RF	Wireless Door Switch / Transmitter
04-1096	Remote Thermistor
201-503	PC-503 Configuration Tool used with engINN
203-250	RS485 DM485 Communication Module

*For indoor use only.

**X47 is required for e527 to interface with HVAC system.